


PALLETwall™ Installation Instructions using Wind-Cleat™

1. Determine location where panels will be installed. Use a level to draw a straight line at desired height.
2. When installing over drywall use a stud finder to mark the center of each stud on the pre drawn level line.
3. Attach Wind Mill's Wind-Cleat™ in desired location on wall.
4. Attach Wind Mill's Wind-Cleat™ across back of PALLETwall™.
5. Slide PALLETwall™ into the Wind-Cleat™

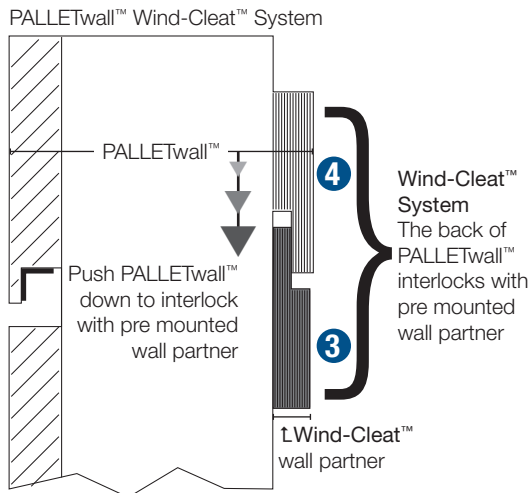

Dos and Do Nots

- DO distribute weight equally on the panels.
- DO use tools per manufacturer's recommendations.
- DO NOT climb, hang, or step on accessories.
- DO NOT overload accessories with additional weight.
- DO NOT drop heavy items on accessories.

Accessories

Accessories provide the ability to create personalized organization providing a simple way to arrange and rearrange products. Use shelves, baskets, and various hooks to meet your organizational needs. For more information visit:

<http://www.windmillslatwall.com/SlatwallAccessoriesRetail.html>

Necessary Tools

- Safety goggles
- Tape measure
- Stud finder
- Level
- Standard drywall screws
- Drill (screw gun)

Safety First

Use all tools according to the manufacturer's recommendations.

