



Make room for what you love.

PVC Easy-Panel™ 4-Pack

The PVC Easy-Panels™ are strong and durable. With its lightweight nature, PVC Easy-Panels™ are easy to handle and install. They are also water and moisture resistant, ideal for a variety of environments, such as garages, basements, and closets. Using standard slatwall accessories makes organization and storage easy.

Sections fit together vertically with a panel connection lip for seamless and unlimited stacking. Four 12"H x 48"L sections are included with each package. The 4-pack is designed for ground shipment.


Accessories are available at www.GarageEscape.com.

For more information visit www.GarageEscape.com or call 800.548.7528 to speak to one of our expert Project Managers.




PVC 12"H x 48"L Easy-Panel™ 4-Pack

- Water and moisture resistant
- Seamless stacking
- Lightweight; each 5/8D" x 12"H x 48"L panel weighs 5 pounds
- Easy to install
- Four 12"H x 48"L sections per pack
- Available in Almond, Black, Gray, and White

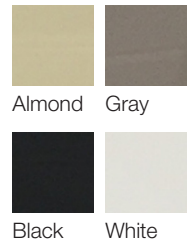

Back panel connection lip ↓

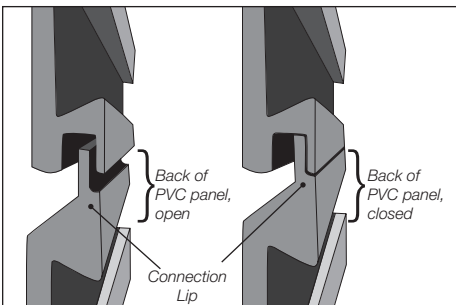

↑ Shipping package includes four 12"H x 48"L panels

Scan to watch installation video



Garage Escape™ is a division of Wind Mill Slatwall Products

800.548.7528 | InfoRequest@windmillslatwall.com | www.windmillslatwall.com
Wind Mill Slatwall Products, a division of Amerhart | 200 Balsam Road | Sheboygan Falls, WI 53085



Make room for what you love.

PVC 4-Pack Installation Instructions


1. PVC panels need to be mounted to a solid, firm surface. Open studs are not recommended.
2. Determine location where PVC panels will be installed. Use a level to draw a straight line at desired height.
3. When installing over drywall use a stud finder to mark the center of each stud on the pre drawn level line.
4. Use correct length screws to attach PVC panel to the wall, screwing through the grooves (see Illustration A below). Due to the uniqueness of each installation, **fastening screws are not included.**
5. If cutting is required, cut wall panels with a power saw. The saw blade should enter the finished side of the wall panels (back side of PVC panel is facing up).

TIP: Mount PVC panels to a solid wall surface. It is not recommended to mount PVC panels to open studs.


TIP: Use a color-matched drywall screw for best holding and visual results.




Illustration A →
Install drywall screws through the back of the grooves (**fastening screws are not included**)

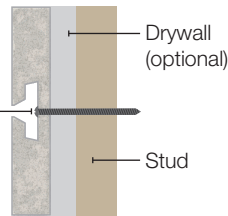

Back panel connection lip ↴

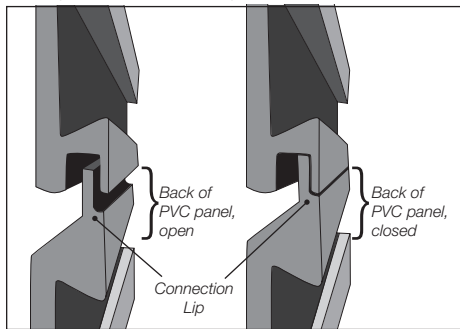


Panel Size

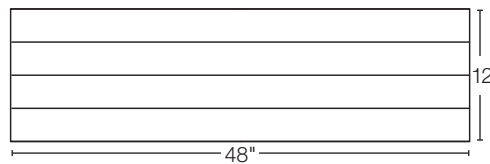

Vertical Installation



Horizontal Installation

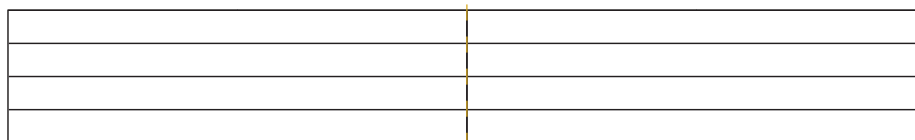

Scan to watch installation video



Accessories

Accessories provide the ability to create personalized organization providing a simple way to arrange and rearrange products. Use shelves, baskets, and various hooks to meet your organizational needs. For more information visit: <http://www.windmillslatwall.com/SlatwallAccessoriesRetail.html>.

Necessary Tools

- Safety glasses
- Tape measure
- Stud finder
- Level
- #8 pan head sheet metal screws
- Drill (screw gun)

Safety First

Use all tools according to the manufacturer's recommendations.

Do's and Don't's

- DO distribute weight equally on the panels.
- DO use tools per manufacturer's recommendations.
- DON'T climb, hang, or step on accessories.
- DON'T overload accessories with additional weight.
- DON'T drop heavy items on accessories.

800.548.7528 | InfoRequest@windmillslatwall.com | www.windmillslatwall.com

Wind Mill Slatwall Products, a division of Amerhart | 200 Balsam Road | Sheboygan Falls, WI 53085